

## INSTALLATION OF INGROUND ELIMINATOR


Prior to installing your ELIMINATOR winter cover, winterize your pool in the manner you have been accustomed to.

For the initial installation you will need two people to install the cover.

You need to remove your ladder and diving board if you have them.

You will need a drill with a 5/16" concrete drill bit, measuring tape and chalk line.


### FINAL RESULT

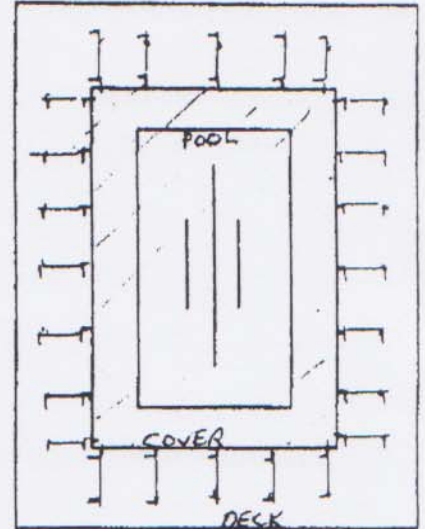

### PROCEDURE

1. Pull the cover over the entire pool so that it overlaps approximately 1 ft. Measure around the pool and adjust accordingly.
2. Use pails of water or similar weights to hold the cover in place until the straps are installed.


Attach a strap with "S" hooks on both ends and hook it onto the loop on the cover.

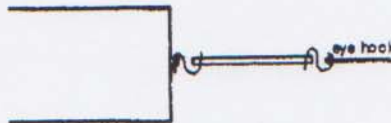

3. Start at one corner of the cover and pull the cover tight so with another person holding onto the opposite side. Pull so that the cover lifts off the surface of the water. With one person on the other end holding the cover tight and straight, pull the cover to put a slight tension (approx. 1 inch) on the strap. Lay the strap out flat and add 1 to 2 inches. At this point drill a hole in the deck using a 5/16" concrete drill bit. Drop the eye bolt into the hole and attach the other "s" hook.

Drill to the length of the shank plus approximately 1/8 inch

The eye of the eyebolt should sit flush on the concrete. It should not sit up above the concrete.

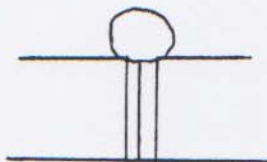


Yes





No



4. Do this on the other side of the corner so that it forms a right angle. Drill again as you did previously.

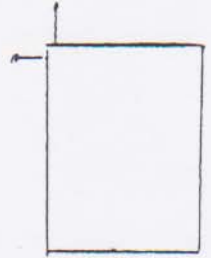

5. Go to your next corner and measure out again. Repeat the process.  
6. Using your chalk line go from one eyebolt to the other eyebolt and mark. This will tell you where to drill your holes.

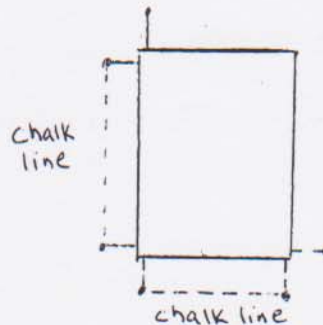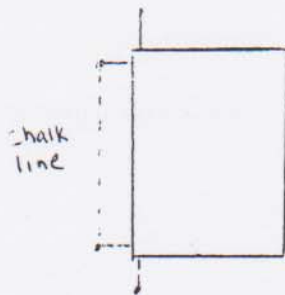

Etc...

7. Continue around all four corners repeating the measurement and drilling process. Mark the chalk lines as before. All four corners will now be drilled and anchored.

The winter cover MUST be tight enough that it is OFF THE SURFACE OF THE WATER.

8. Now work down each side putting tension on as you go before drilling the deck. Install 2 or 3 eye hooks alternatively on each side until completion.

The overall appearance is to have the cover stretched across the pool with a very slight dip in the centre. (Not as tight as a drum) The cover MUST be off the surface of the water.

If you have steps it is recommended that you cover a piece of plywood with a step flap kit.